



JuLI Stage Update Instruction (Online, Auto update)


1. Start JuLI Stage. When below message appears, **Click 'OK' button** to update software.

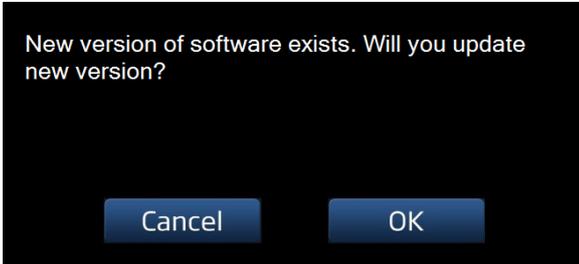


2. When software update finished, **click 'OK' button** and it will be rebooted.

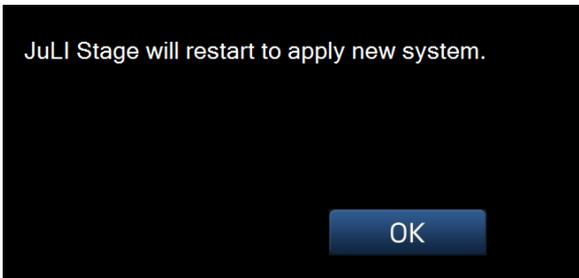

3. **Click 'OK'**. It will reboot JuLI Stage software..

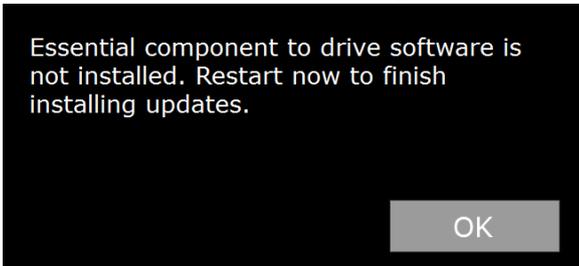


4. To install DirectX, **click 'OK'**.
Then software will be closed.

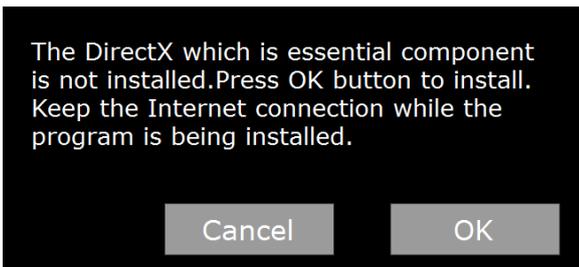

5. **Select 'I accept the agreement' and click 'Next'.**




6. **Keep clicking the 'Next' button**, then installation will be completed. **Click 'Finish'.**

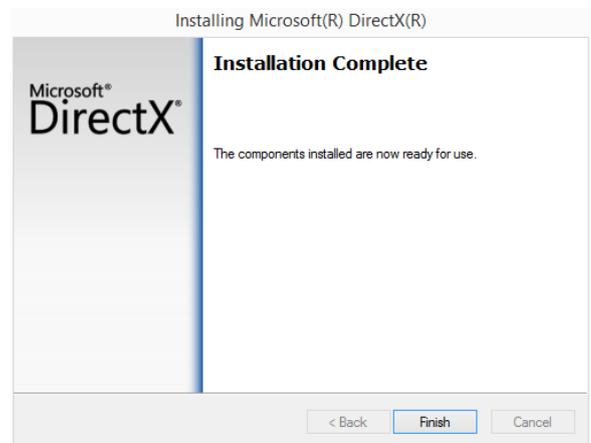


7. **Double click 'JuLI Stage' icon** on the desktop.




8. To update firmware, click 'OK'.

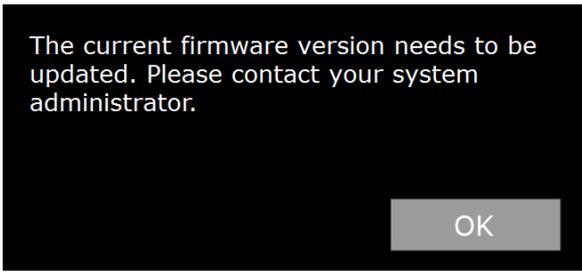


9. Click 'OK' again.

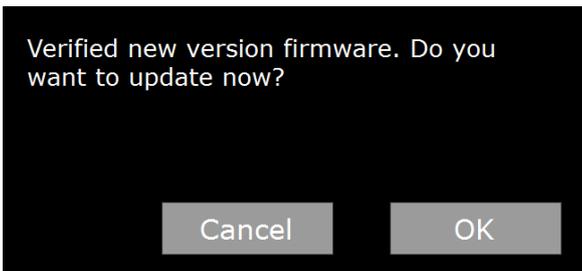

10. To apply new firmware, updates will be in progress. JuLI Stage will be initialized.

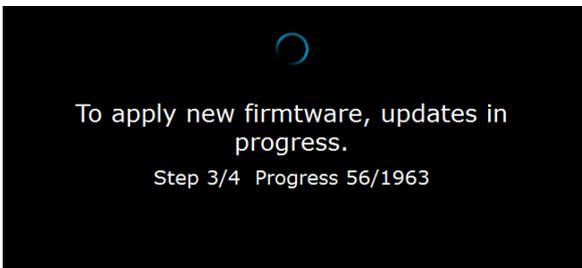

11. Click 'OK' to finish updates successfully. Software will be rebooted.

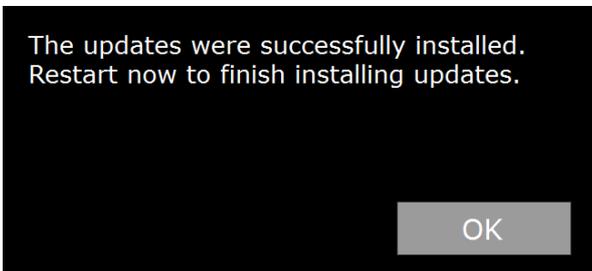

12. The updated version will be displayed.

